


**Installing the Hot-Spark Electronic Ignition Conversion Kit  
in 4-cylinder and 6-cylinder  
GM/Delco Distributors**

*Applies to red Hot-Spark 3-series ignition kits*

**Warning: Reversing the red and black ignition wires will destroy the ignition module.** The Hot-Spark module's red wire connects to positive (+ or 15 on Bosch coil). The black wire connects to negative (- or 1 on Bosch coil). Remove the condenser and its wire from vehicle. Connect any other wires to the coil in their original positions. This module is designed for 12V negative ground applications only.

**Test Maximum Charging System Voltage:** If the charging system voltage, measured at the coil's positive terminal, is more than 13.7 volts at any RPM level, the voltage regulator likely needs replacing. Too much voltage can destroy the ignition module and other electronic components. A maximum charging system voltage of 12.7 volts or so is plenty. A quick fix is to wire a [1.4 Ohm external ballast resistor](#) between the coil's + terminal and the HotSpark ignition's red wire.

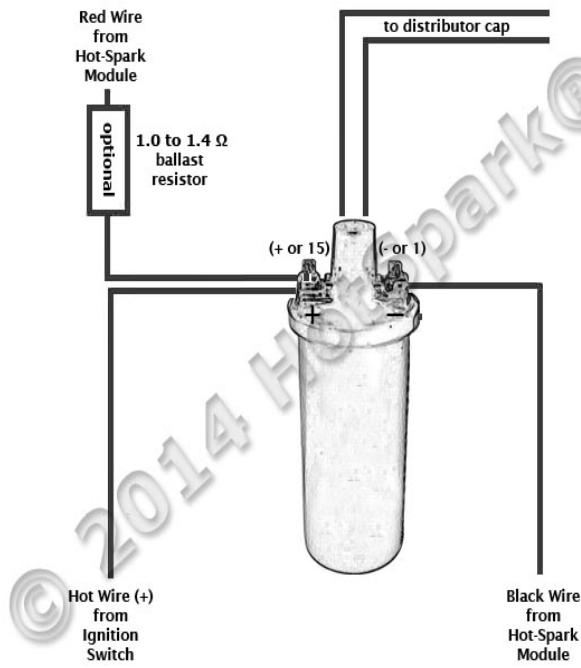

Make sure that the ignition wires have plenty of slack inside the distributor and are not rubbing on any moving parts. It's best to use a small zip-tie, on the inside of the distributor, where the ignition wires exit, to keep the wires from being pulled into contact with moving parts. If you need to extend the length of the ignition wires, use 20-gauge (AWG) wire. Crimp tightly or solder all connections.

**Remove points, condenser and condenser wire from distributor.** Remove the condenser and its wire from the vehicle.

**Important:** Clean the distributor's breaker points plate thoroughly, so that the ignition module's base plate makes good thermal contact with the distributor. Does your distributor shaft have axial (up and down) play? If so, the shaft is likely positioned too low for the magnets in the magnet sleeve to align with the ignition module sensor. You may need to replace worn-out shaft shims inside the distributor, thus raising the height of the distributor shaft.

**Coil Required:** Do not use a low-resistance coil that does not have the minimum primary resistance required by the ignition module, as stated in the instructions (minimum 3 ohms for 4- and 6-cyl, assuming a 12-Volt electrical system). The coil resistance regulates the current in the ignition module/coil circuit. Too little coil primary resistance results in too much amperage going to the ignition module, which can overheat the electronics. The failure may not happen immediately, but the excess heat will shorten the life of the ignition module electronics. How long the electronics will last depends on how much heat is generated. It could be a matter of a couple of hours to a few hundred hours, depending on temperature.

**To measure coil primary resistance:** Label and remove all wires to coil (+ or -). Using a common digital multimeter in the 200 Ω mode, cross the red and black leads of the Ohmmeter. Allow 10 seconds or more for the reading to settle and write down the reading. Still in the 200 Ohm mode, measure between coil's + and - terminals. Allow a few seconds for the reading to settle, until it stabilizes. Subtract the previous reading, taken with the leads crossed, to compensate for Ohmmeter's inherent resistance. Do not use a low-resistance coil, such as the MSD or Accel coil; they don't have enough primary resistance for this application. For best performance, the coil should also have 7,000 Ohms or more secondary resistance (measured from coil's + or – terminal to center high tension terminal, in the 20K Ω mode of the Ohmmeter).

**Ballast Resistor:** If the charging system's voltage, at any RPM level, measures more than 13.7 volts, wire an external ceramic ballast resistor (with about 1.4 Ohms resistance) between the coil's + terminal and the red HotSpark ignition wire: [www.HotSpark.com/1-HS14BR.htm](http://www.HotSpark.com/1-HS14BR.htm)

**Test Battery Voltage to Coil:** With ignition switch ON, engine not running, check voltage at coil's + terminal. The voltmeter should read somewhere around +12.5 volts. If voltage is too low or there's no reading, the battery's terminals or ground connection may be corroded and need cleaning or the battery may need charging. Some vehicles have a resistor wire running from the ignition switch to the coil's + terminal. If this resistor wire drops the voltage below 9 volts or so, you may need to run a non-resistor wire from the ignition switch to the coil's + terminal or run a +12V wire directly from the ignition switch to the red Hot-Spark ignition wire. Make sure that the ignition switch terminal to which you connect this wire has power only when the ignition switch is in the ON position. Or, you can, for temporary testing purposes only, run a wire directly from the battery's + terminal to the coil's + terminal, the Hot Spark ignition's red wire to the coil's + terminal and the black Hot-Spark wire to the coil's - terminal. Do not leave the wire from the battery connected to the coil's + terminal for more than a minute or so without the engine running.

**Air Gap between Magnet Sleeve and Ignition Sensor:** If you need to increase air gap slightly, hold ignition base plate away from distributor shaft while tightening set screw and/or loosen the two Allen head screws and retighten screws while lightly prying ignition module away from magnet sleeve. Do not over-torque these Allen screws. Black magnet sleeve should not rub against red ignition module, but exact gap is not critical. In rare instances, it may be necessary to gently pry red ignition module away from black magnet sleeve to keep them from rubbing together.

**Ignition Timing:** Set the ignition timing, using a stroboscopic light, to the distributor's factory specification. The difference in distributor position with points vs. electronic ignition can be as much as 30 degrees or so clockwise or counterclockwise, so you'll definitely have to reset the timing. **The old method of setting the timing statically, using a simple 12-volt test lamp, doesn't work** with electronic ignition, as with points. The only way to bench-test a distributor is by using a distributor testing machine. In other words, the distributor needs to be mounted in the engine and tested and/or timed using a stroboscopic timing light, connected to number one cylinder's spark plug wire.



© 2005-2017 HotSpark®

## **Electronic Ignition Conversion Kit for Centrifugal-advance 4- and 6-cylinder Delco Distributors**



## **Electronic Ignition Conversion Kit for Vacuum-advance 4- and 6-cylinder Delco Distributors**

1. Turn off the ignition switch and/or remove the ground strap from the battery. Though not absolutely necessary, it is probably easiest overall to remove the distributor from the car before installing the Hot-Spark module. If the contacts in the inside of the distributor cap are worn or damaged, replace the distributor cap. Replace the rotor if it's worn.
2. Remove distributor cap, leaving the plug wires in place, unless replacing the distributor cap as well.
3. Make a mark with a felt pen on the rim of the distributor, close to the center of the points. The new red ignition module should align, somewhat, with this mark. Remove breaker plate, points, condenser and their wires from the distributor. Because the Hot-Spark kit does not modify the distributor, the old breaker plate with points and condenser can be reinstalled at a later time, if desired.
4. Clean any grease or dirt from the distributor shaft's points cam.
5. Replace the entire old breaker plate with the new Hot-Spark breaker plate, using the same screws in the same holes as the old breaker plate.

**3DEL4U1** Electronic ignition kit for 4-cylinder GM/Delco distributors with centrifugal advance only. Not for vacuum-advance distributors. Replaces entire breaker plate. You may need to bend the ignition kit's vacuum arm (with its pin) slightly, to ensure smooth movement of the vacuum advance. Press the magnet sleeve down, as you turn it left and right, until the magnet sleeve starts to slip over the lobes of the distributor shaft. Press it down as far as it will go. You'll then need to file, with a rat-tail file, a small groove into the bottom of the distributor cap where the distributor cap sits on the rubber grommet which protects the ignition wires exiting the distributor. Set the timing with a stroboscopic timing light, according to factory specifications. The 3DEL4U1 ignition kit must be used with a coil that has a minimum of 3.0 Ohms primary resistance.

**3DEL6U1** Electronic ignition kit for 6-cylinder GM/Delco distributors with centrifugal advance only. Not for vacuum-advance distributors. Replaces entire breaker plate. You may need to bend the ignition kit's vacuum arm (with its pin) slightly, to ensure smooth movement of the vacuum advance. Press the magnet sleeve down, as you turn it left and right, until the magnet sleeve starts to slip over the lobes of the distributor shaft. Press it down as far as it will go. You'll then need to file, with a rat-tail file, a small groove into the bottom of the distributor cap where the distributor cap sits on the rubber grommet which protects the ignition wires exiting the distributor. Set the timing with a stroboscopic timing light, according to factory specifications. The 3DEL6U1 ignition kit must be used with a coil that has a minimum of 1.5 Ohms primary resistance.

**3DEL4V1** Electronic ignition kit for 4-cylinder GM/Delco distributors with vacuum advance. Not for non-vacuum-advance distributors. Replaces entire breaker plate. Insert vacuum-advance peg in vacuum-advance arm. You may need to bend the ignition kit's vacuum arm (with its pin) slightly, to ensure smooth movement of the vacuum advance. Secure new electronic breaker plate with the same two screws, in the same two screw holes as used before. Press the magnet sleeve down, as you

turn it left and right, until the magnet sleeve starts to slip over the lobes of the distributor shaft. Press it down as far as it will go. You'll then need to file, with a rat-tail file, a small groove into the bottom of the distributor cap where the distributor cap sits on the rubber grommet which protects the ignition wires exiting the distributor. Set the timing with a stroboscopic timing light, according to factory specifications. The 3DEL4V1 ignition kit must be used with a coil that has a minimum 3.0 Ohms primary resistance.

**3DEL6V1** Electronic ignition kit for 6-cylinder GM/Delco distributors with vacuum advance. Not for non-vacuum-advance distributors. Replaces entire breaker plate. Insert vacuum-advance peg in vacuum-advance arm. You may need to bend the ignition kit's vacuum arm (with its pin) slightly, to ensure smooth movement of the vacuum advance. Secure new electronic breaker plate with the same two screws, in the same two screw holes as used before. Press the magnet sleeve down, as you turn it left and right, until the magnet sleeve starts to slip over the lobes of the distributor shaft. Press it down as far as it will go. You'll then need to file, with a rat-tail file, a small groove into the bottom of the distributor cap where the distributor cap sits on the rubber grommet which protects the ignition wires exiting the distributor. Set the timing with a stroboscopic timing light, according to factory specifications. The 3DEL6V1 ignition kit must be used with a coil that has a minimum of 3.0 Ohms primary resistance.

6. Install magnet sleeve, with the larger opening down. Turn the magnet sleeve left and right, while pushing down firmly, until you can feel the distributor shaft cam lobes line up with the flat spots inside the magnet sleeve. Press down firmly until the magnet sleeve slides as far down as it will. Install the rotor on top of the magnet sleeve, making sure the rotor is aligned with the slot in the top of the distributor shaft. The rotor should slide all the way down and lock into place, so that it cannot turn independently of the distributor shaft. If you can still turn the rotor independently of the distributor shaft, the magnet sleeve and/or rotor is not seated all the way down.

**Magnet sleeve positioned too high:** Situation: The fit between the distributor shaft and the magnet sleeve is especially tight and you can't slide the magnet sleeve down onto the distributor shaft all the way. The rotor rides too high, causing the distributor cap to wobble when you rotate the distributor shaft. Fix: Rotate the magnet sleeve so that it lines up with the lobes of the distributor shaft cam and the magnet sleeve can slide down a bit. Install the rotor and tap, with a small hammer or a soft rubber mallet, *very gently*, on the center of the rotor, until the magnet sleeve seats firmly onto the distributor shaft, over the distributor cam lobes. With the rotor and distributor cap installed, you should be able to rotate the distributor shaft without the distributor cap wobbling.

**A small oval plate and metric hex-head screws may have been included** with the ignition kit in case you need to boost the height of the red ignition module to align with the magnets inside the magnet sleeve.

**An O-Ring may have been provided to raise the height of the magnet sleeve**, if that is needed, instead. Install the O-Ring around the distributor shaft, underneath the magnet sleeve.

Early distributors have distributor shafts that may vary in height, depending on the wear, number and thickness of the distributor shaft shims inside the distributor.

**Magnet sleeve fit too loose:** If the fit between the distributor shaft lobes and the magnet sleeve is too loose, the distributor shaft may be worn down from years of the points block rubbing on the distributor cam lobes, with accumulated dirt and grit, and/or insufficient lubrication. If the fit is especially loose, the only solution, short of replacing the distributor, may be to clean the distributor cam lobes thoroughly with alcohol and wrap the lobes with several wraps of Teflon tape, before pressing the magnet sleeve down over the lobes. Too loose a fit between magnet sleeve and distributor cam lobes may result in erratic timing.

7. Adjust the two Hot-Spark ignition wires so that they have plenty of slack inside the distributor and they're not rubbing on any moving parts. Install the grommet into the cloverleaf cutout, as in the above photo.

8. Using a rat-tail file, or something similar, file a slight groove into the bottom rim of the distributor cap above where the grommet will pass. Install the distributor cap.

9. Reinstall the distributor.

10. The Hot-Spark module's red wire connects to positive (+). The black wire connects to negative (-). DO NOT reverse the polarity of these wires or the ignition module will be destroyed.

11. Check all wire connections, including the two Hot-Spark wires and the spark plug and coil high-tension wires. If you need to extend the length of the wires, use 18- or 20-gauge wire. We recommend soldering all splices and connections, if you can, or crimp all connections tightly. Make doubly sure that all wires are connected to the proper terminals, etc. before reconnecting the battery or turning the ignition switch to the ON position. Make sure that all connectors are snug. Reconnect the battery and set the distributor timing statically. It's a good idea to secure the wires inside the distributor, next to where they exit, with a zip tie, to keep the wires from being pulled into contact with the spinning magnet sleeve or rotor.

12. You can set the timing statically to about 0° (TDC) at first, so that the engine will start. You may need to tweak the distributor, a little at a time, right or left, to enable the engine to start and remain running. Time the engine with a stroboscopic light, with the engine running, according to factory specifications.

## Setting Timing

**Setting Timing:** This will probably be the last time you have to set the timing for a long time, so it's worth it to spend the extra time and effort to set the timing absolutely spot-on accurately. An engine with its timing set to perfection will start with the slightest bump of the starter and purr like a kitten at idle – something to make you feel good every time you start the engine.

TDC = Top Dead Center, or 0° BTDC = Before Top Dead Center ATDC = After Top Dead Center

**Distributor Cap and Rotor:** Stock GM/Delco rotors and distributor caps work fine with the Hot-Spark module. A worn, corroded or scored distributor cap and/or rotor is often the cause of the timing jumping around erratically at idle. We recommend installing a new distributor cap and rotor when converting from points to electronic ignition.

**Spark Plug Gap:** With the Hot-Spark ignition kit, the stock spark plug gap specification is fine. For racing purposes, you can increase the spark plug gap by about .005 inches, or .12 mm.

**Hot-Spark Ignition and MSD 6 Series Wiring Diagram:** [www.Hot-Spark.com/Hot-Spark-MSD-6-series.jpg](http://www.Hot-Spark.com/Hot-Spark-MSD-6-series.jpg)

## Wiring Installation Basics:

1. Remove points, condenser and condenser wire from the vehicle.
2. Attach the red lead of a voltmeter to the coil's positive ( + ) terminal. Attach the voltmeter's black lead to engine ground. With the ignition switch on, engine not running, measure the voltage at the coil's positive ( + ) terminal. The reading should be somewhere around +11 to +13 volts. If voltage is too low or there's no reading, the battery's terminals or ground connection may be corroded and need cleaning. Some vehicles have a resistor wire running from the ignition switch to the coil's + terminal. If this resistor wire drops the voltage below 9 volts or so, you may need to run a non-resistor wire from the ignition switch to the coil's + terminal or run a +12V wire directly from the ignition switch to the red Hot-Spark ignition wire. Make sure that the ignition switch terminal to which you connect this wire has power only when the ignition switch is in the ON position.

To get the ignition running initially, only these wires should be attached to the coil's + and - terminals:

- A. +12 volts from the ignition switch to the coil's + terminal
- B. Red Hot-Spark wire to the coil's + terminal
- C. Black Hot-Spark wire to the coil's - terminal. **DO NOT connect any +12-volt wire to the coil's - terminal. Connect only the black Hot-Spark ignition wire to the coil's - terminal. Do not connect the coil's - terminal to ground.**
- D. The automatic choke and fuel shut-off valve may also need to be attached to the coil's + terminal.

E. Generally, only the black Hot-Spark wire is attached to the coil's - terminal. If a tachometer wire is usually attached to the coil's - terminal, don't attach it until the timing has been set and engine is running properly. No other wires should be connected to the coil's + and - terminals at this time.

F. **Static timing, using an ordinary 12-volt test lamp, will not work.** Attach a stroboscopic timing light to the spark plug wire of cylinder number 1. With engine rotated to TDC (0 degrees) on the firing stroke of Cylinder number 1, ignition switch ON, turn the distributor until the timing light flashes. You may need to turn the distributor left or right, a little at a time, until the engine will stay running, so that you can set the timing with the engine running, using a stroboscopic timing light, according to factory specifications.

G. For testing purposes, no other wires should be attached to the coil terminals, except for the center high-tension lead to the distributor cap.

Attach a stroboscopic timing light to the spark plug wire of Cylinder number 1. With engine rotated to TDC on the firing stroke of Cylinder number 1, ignition switch ON, slowly turn the distributor clockwise or counter-clockwise until the timing light flashes. Tighten the distributor clamp a little, so that you can still turn the distributor by hand, but the distributor won't turn on its own. The rotor should be pointing to number 1 cylinder's spark plug wire.

Start the engine. You may need to turn the distributor left or right a little, until the engine will stay running, so that you can set the timing with the engine running, using a stroboscopic timing light, according to factory specifications.

#### **Using Hot-Spark Ignition with VDO Tachometer:**

Connect a diode #1N4005 between the negative terminal (- or 1) of the coil and the wire that goes to the tachometer. The cathode end (silver band) should be nearest the tachometer side, not the coil side. You should be able to buy a diode #1N4005 at Radio Shack or other electronic supply store.

**Latest On-Line Installation Instructions:** [www.Hot-Spark.com/Installing-Hot-Spark-Delco.pdf](http://www.Hot-Spark.com/Installing-Hot-Spark-Delco.pdf)

**Problems with Installation? See** [www.Hot-Spark.com/Troubleshooting.pdf](http://www.Hot-Spark.com/Troubleshooting.pdf)

**OMC Marine Engine Shift Assist Adapter:** Click here for wiring diagram: [www.Hot-Spark.com/OMC-Shift-Assist-Adapter.jpg](http://www.Hot-Spark.com/OMC-Shift-Assist-Adapter.jpg)

© 2005-2017 HotSpark®